

**WARNING**







Children have died from furniture tipover.

- ALWAYS secure your television with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.

CATEGORY 2



Edge Wall System Comp 8 Assembly | User Guide

K I N G












Two people required for safe assembly

Opening Boxes: DO NOT use a knife to open the packaging as you may damage your furniture. Peel-off the tape, then lift and separate the cardboard flaps to open.

Please follow these Assembly | User Guide Instructions

Product Care

 
Hardware

Packing List							
1			*6	5		6mm	*16
2			*6	6		4mm	*1
3		130mm	*3	7		4.2*32	*16
				8		4*16	*8
4		4.2*45	*16	9			*2

1

Assembly Bottom Unit


Connect the Boxes with Bolts

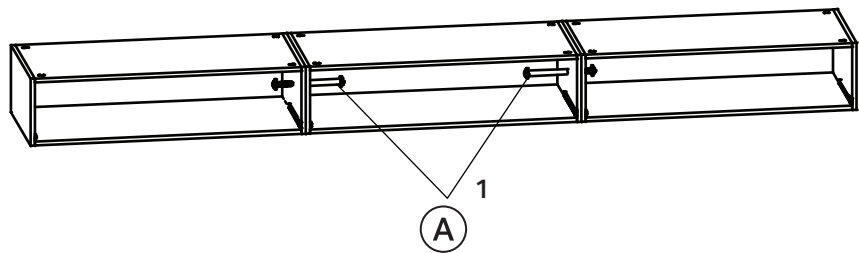

2

Assembly Bottom Unit


 
Fix Top Panel with Screws

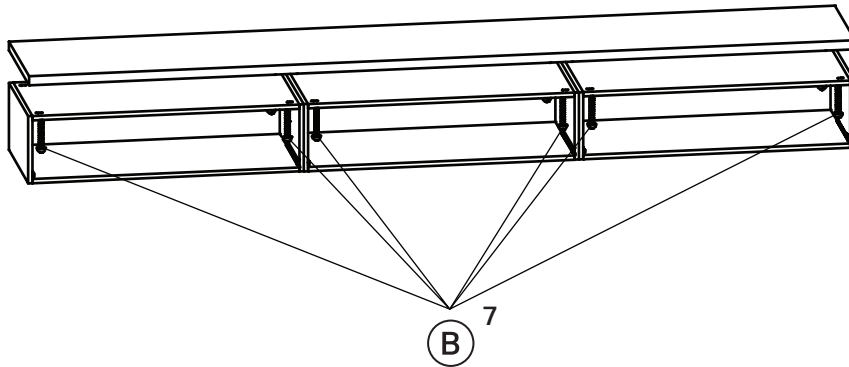

3


Assembly Bottom Unit

  Adjusting Legs – Leveling

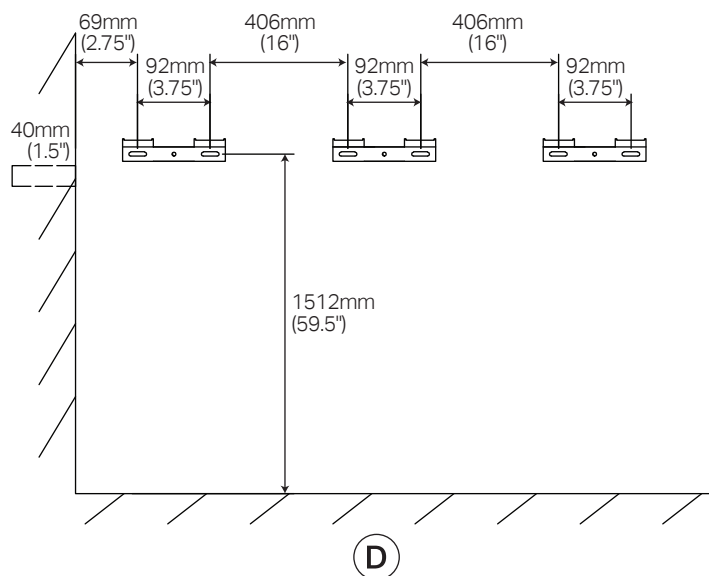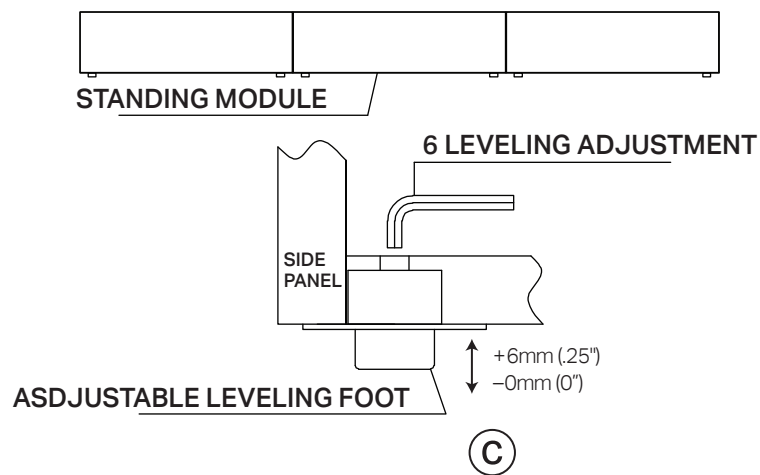


Assembly Top Unit

 SHELF SHOULD BE FIT ON BACK PANEL WITH "T-BAR" / FIXED BY SCREWS

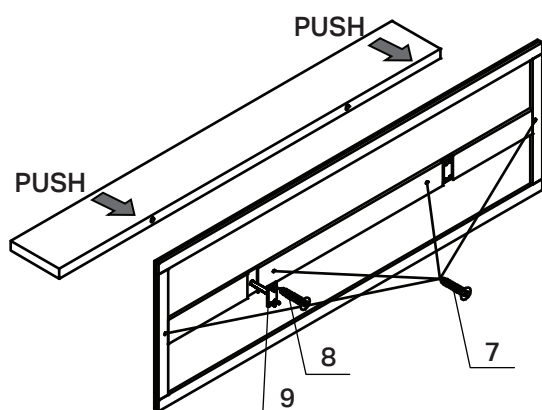


(E)

 TO FIT BACK PANEL / SHELF ONTO HANGING RAIL

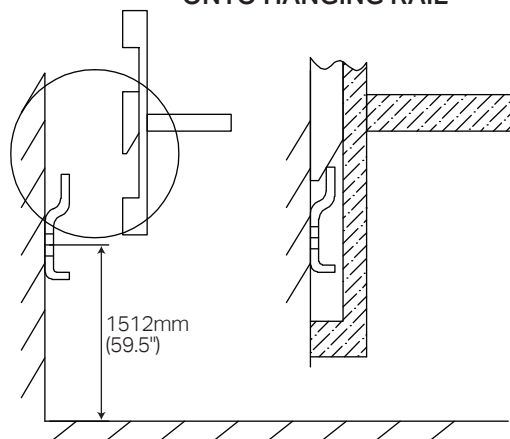


(F)

 TO FIX RAIL FOR HANGING BOX

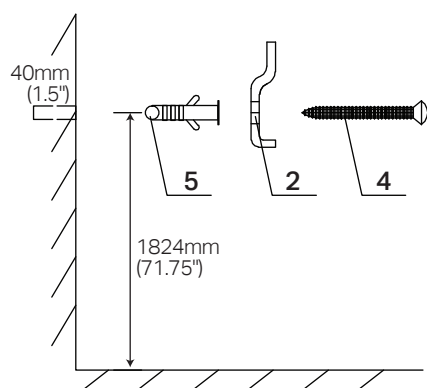


(G)


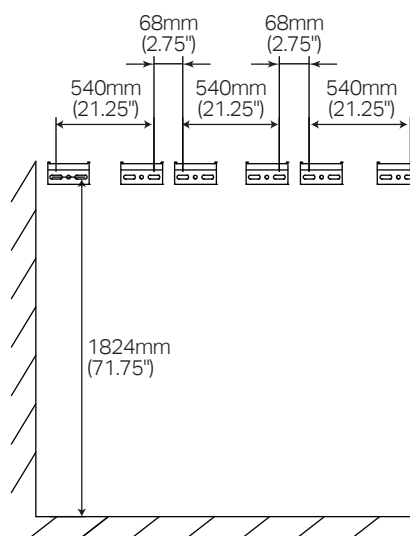 


(H)

 
Assembly Top Unit

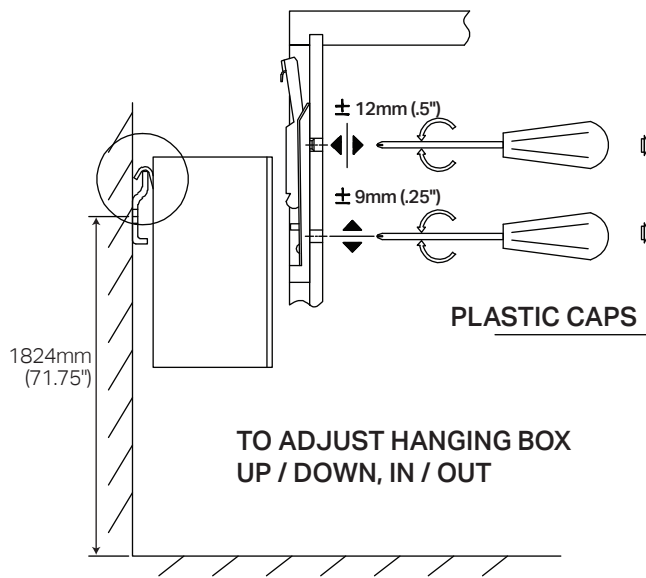

I

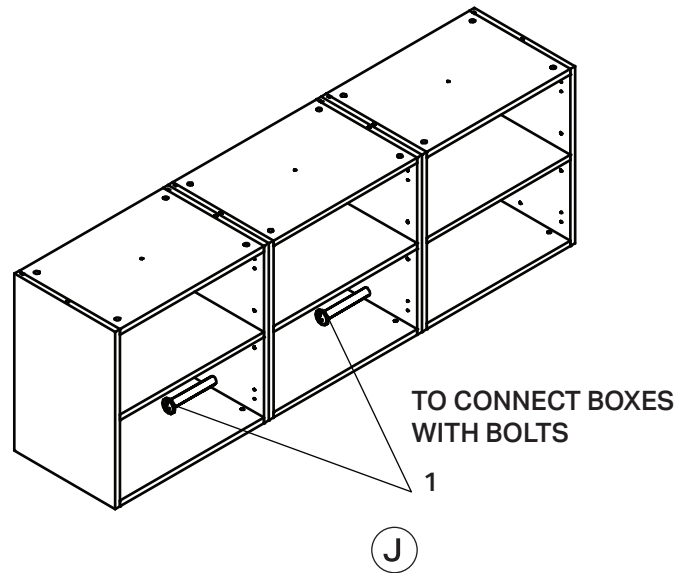  

Top Unit
Completed

 

Bottom Unit
Completed

K